




### MODEL 50L

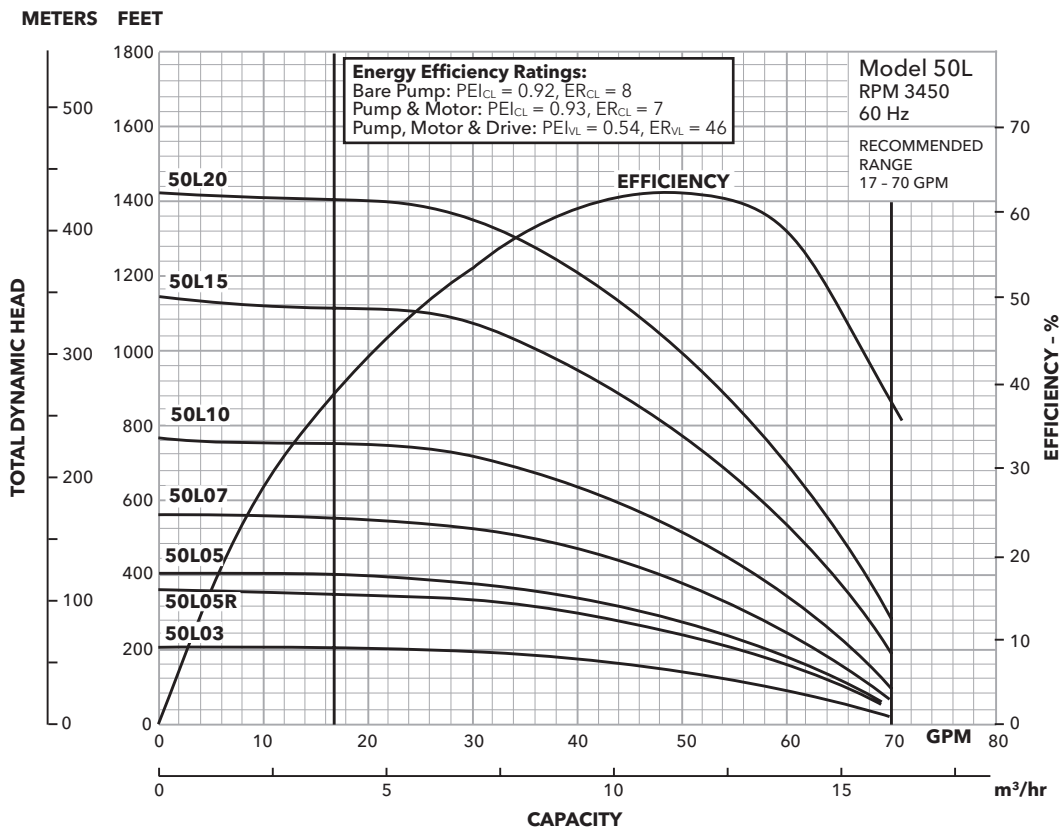


### MODEL 65L

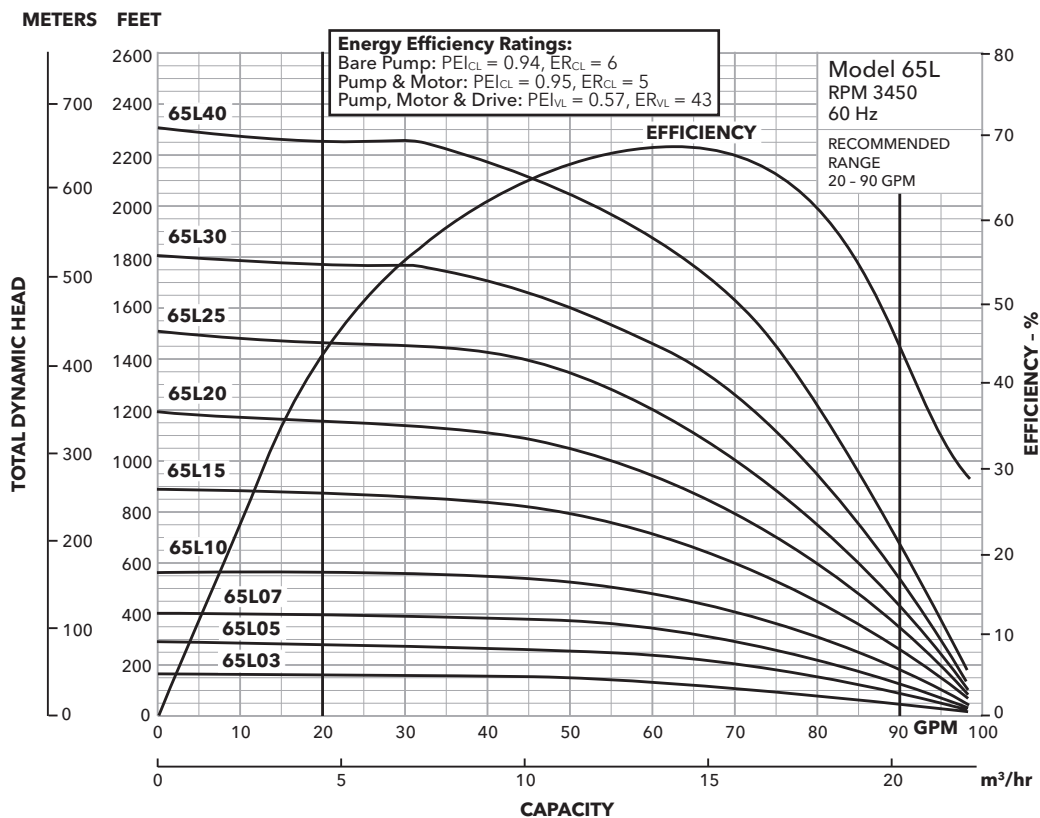


### MODEL 95L

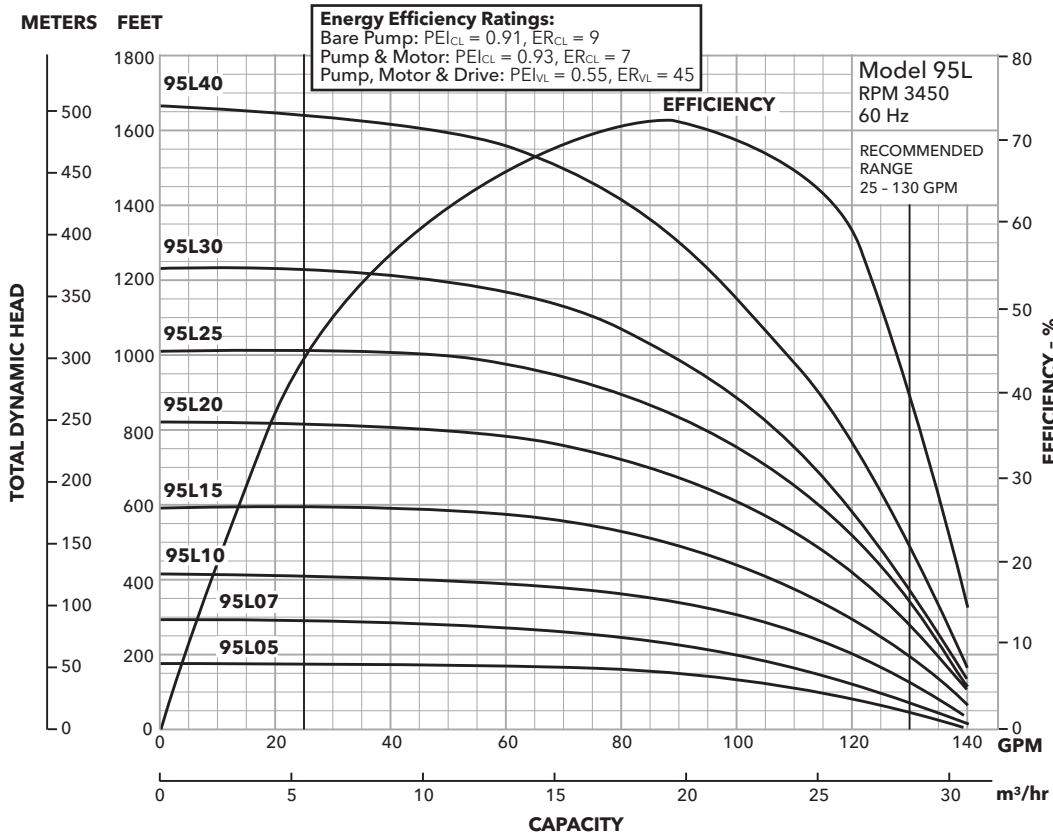


### MODEL 120L

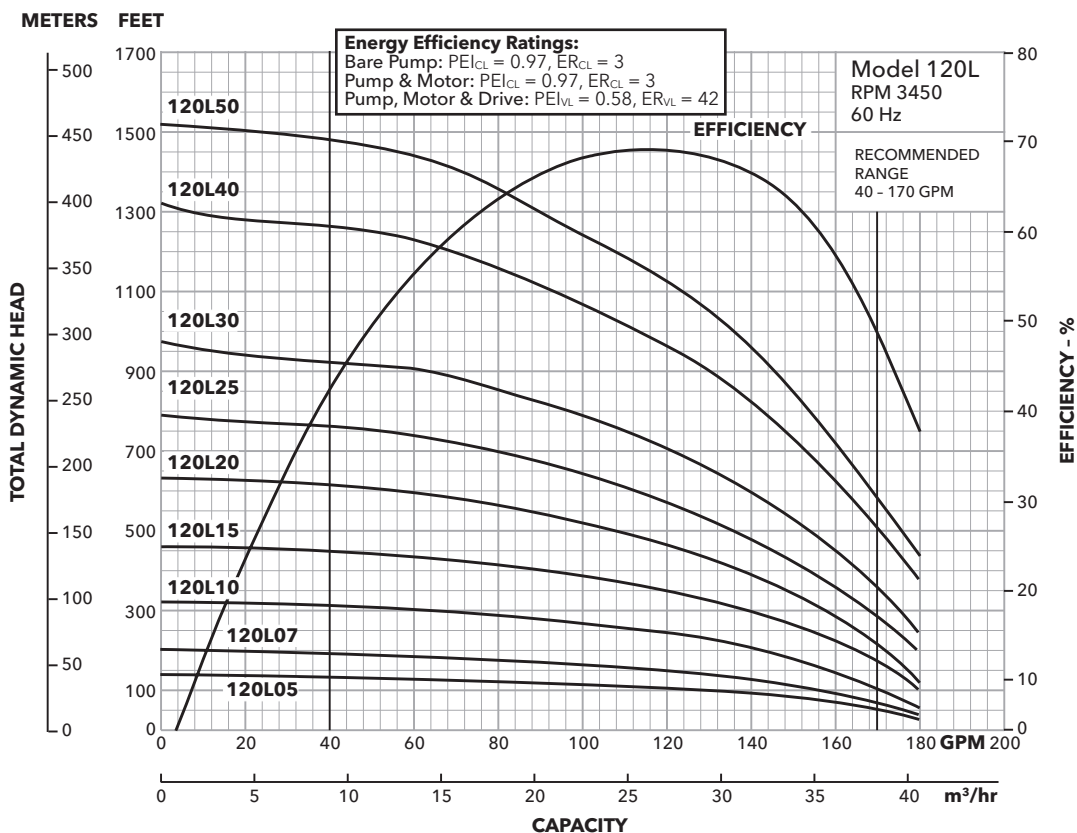

### MODEL 160L

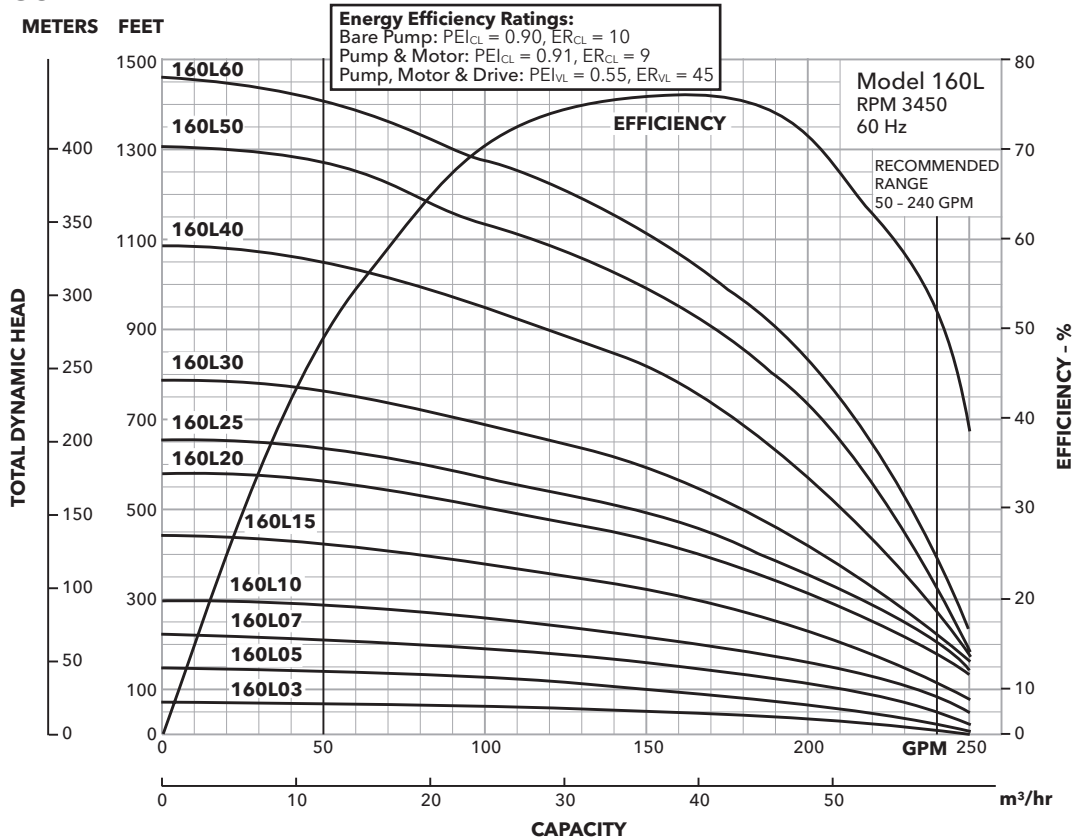


### MODEL 250L

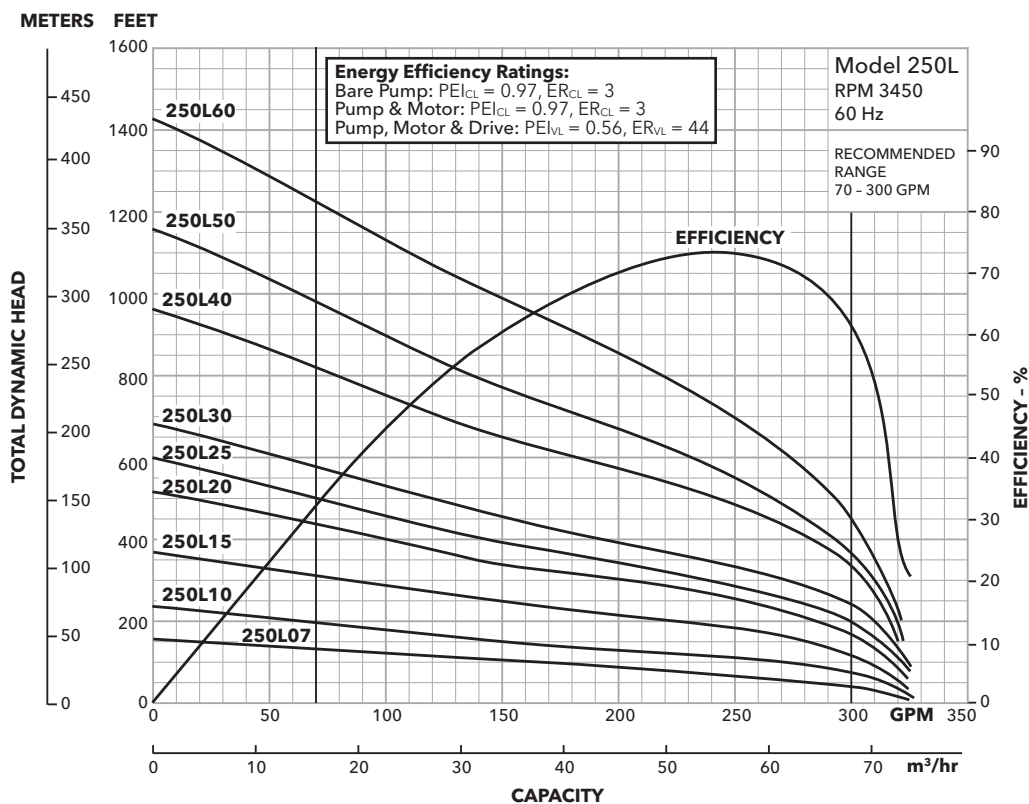

**NOTE:** On 250L, operation below minimum recommended flow will increase motor amp. draw and trip overloads.

### MODEL 320L

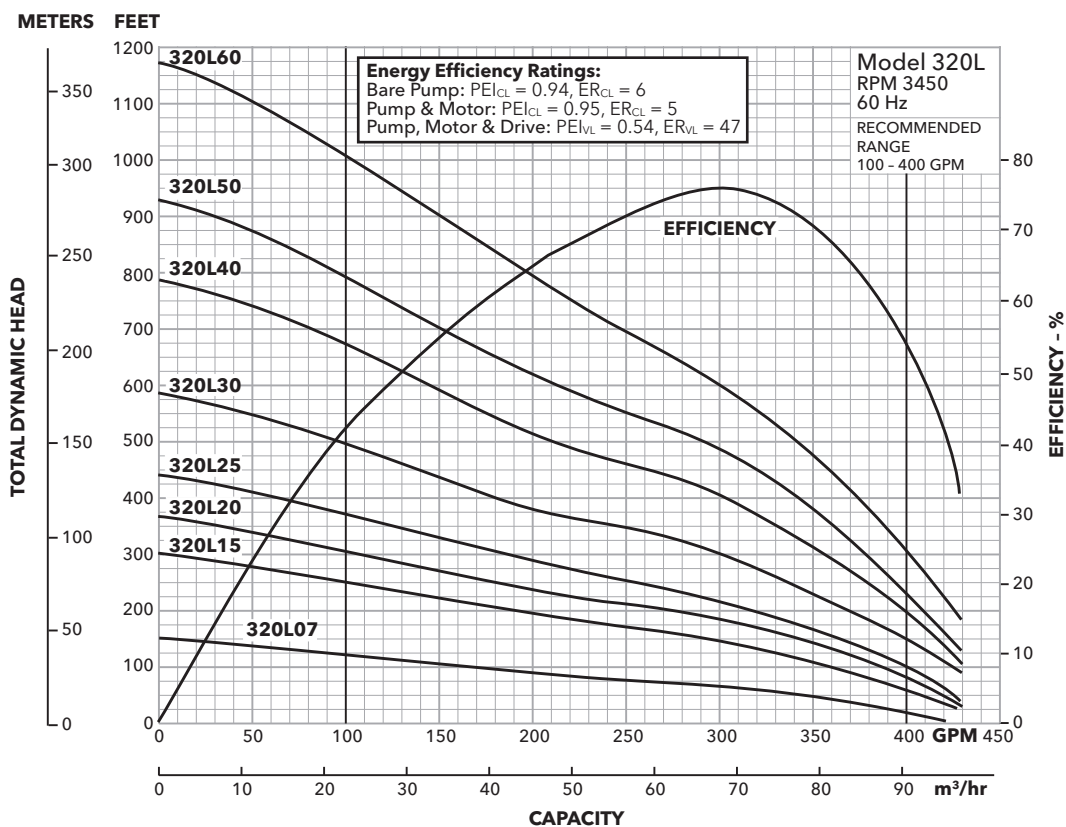

**NOTE:** On 320L, operation below minimum recommended flow will increase motor amp. draw and trip overloads.